

Historic, Archive Document

Do not assume content reflects current scientific knowledge, policies, or practices.

1
Ag 84 Pro
copy 2

1051

waste disposal

... soil surveys
can help you



Soil Conservation Service
U.S. Department of Agriculture

WASTE DISPOSAL

Whether you are a homeowner, land use planner, board of health official, county sanitarian, or land developer, waste management concerns you. This pamphlet tells how soil surveys available from the Soil Conservation Service can help in planning the disposal of liquid and solid wastes through septic tank absorption fields, sewage lagoons, and sanitary landfills.

Septic Tank Absorption Fields

Because of rapid suburban expansion, the number of homes that do not have access to a public sewage disposal system has increased greatly. The most common system for individual homes is one in which the sewer line from the house leads to an underground septic tank in the yard. Overflow from the tank disperses into the soil through a system of underground drains or perforated pipes.


To design a system that will work, you need to know the capacity of the soil to absorb



Soil surveys can help in identifying areas suitable for landfills.



Soil surveys can help in selecting areas suitable for constructing sewage lagoons.

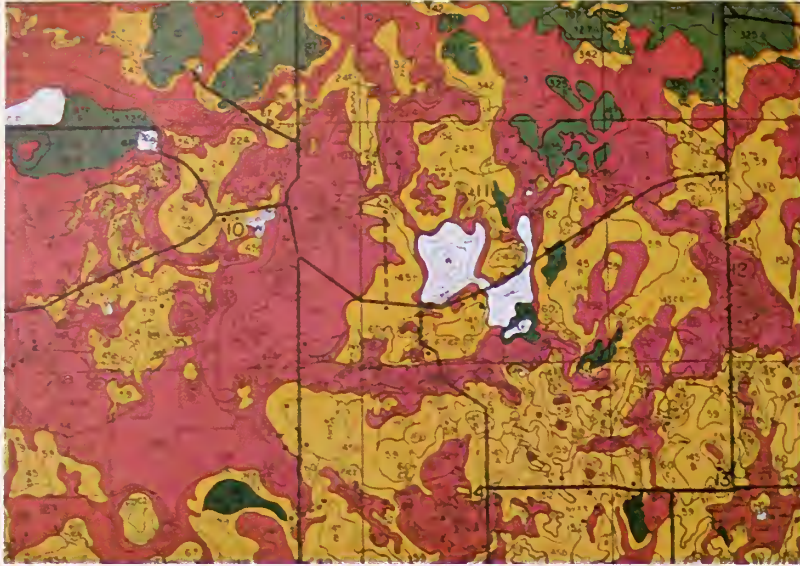

A soil map colored to show slight (green), moderate (yellow), and severe (red) limitations for septic tank absorption fields provides a basic reference for sanitarians and health officials.

effluent. Movement of effluent through soil is determined mainly by the porosity of the soil, the size of the soil particles, and by the kind of clay in the soil. Effluent moves faster through sandy and gravelly soils than through clayey soils. Soils high in clay content have limited pore space for holding effluent. Some kinds of clay expand when wet and close the pores entirely. Such soils are unsuitable for absorption fields. If the soil is not porous, the effluent simply builds up and seeps to the surface.

Soils that have a high water table may be saturated part of the year. A saturated soil cannot absorb additional liquid, and the



Disposal of wastes from feedlots, broiler plants, and other sources can be planned through use of soil surveys.

This commercial development was built on the site of a sanitary landfill.



unfiltered septic tank effluent discharged into the drains may seep to the surface. If there is a seasonal high water table, the septic tank absorption field may work in dry seasons but fail in wet seasons.

Soil that is shallow to rock or soil that has a cemented layer just below the bottom of the trench in which drains are laid lacks space for the effluent to be absorbed. About 4 feet of soil material between the bottom of the trench and any rock formation is necessary for absorption, filtration, and purification of septic tank effluent. More than 4 feet may be required if the underlying rock is limestone that contains water used for domestic use.

Steep slopes—15 percent or steeper—make it difficult to control the distribution of effluent. Effluent distributed into soil on a steep slope may seep onto the ground surface at a lower level. Digging drain trenches on the contour insures that the effluent flows slowly through the drains and disperses throughout the absorption field.

Soils that are subject to flooding should not be used for absorption fields. Flooding destroys the effectiveness of the field and allows unfiltered effluent to pollute the stream.

Sewage Lagoons

Sewage lagoons are shallow manmade ponds used to hold sewage for the time required for bacterial decomposition, after which the clarified water is released from the lagoon.

The lagoon must be capable of holding water with a minimum of seepage. The soil material in the bottom of the lagoon and in the embankment should be free of stones and boulders that interfere with compaction. Porous soils have severe limitations for sewage lagoons because water moves through the soil too rapidly.

The soil also should be low in organic-matter content to reduce the potential growth of aquatic plants. There should be no hazard of flooding, and the depth to water table should be at least 40 inches. Slope should be no more than about 7 percent.

Sanitary Landfills

Sanitary landfill is one way to dispose of garbage, boxes, plastic and metal containers, and other solid wastes. Refuse is spread, compacted, and covered with soil material daily.

Landfill cannot be placed just anywhere. The properties of the soil and the kind of management determine the success of a sanitary landfill.

Soils used for landfill should not be subject to flooding or have a high water table. Flooding the landfill causes pollution of offsite areas. If the water table is seasonally high, leachate from the landfill may contaminate ground water.

Steep slopes cause an erosion hazard. More care is needed on sloping to steep soils to dispose of runoff water, including that from adjacent higher elevations. More grading is required for the roads that lead to and from a landfill on sloping to steep soils than on nearly level soils. Soils used for landfill should be easy to excavate and should hold up under heavy vehicular traffic in all kinds of weather. Most fine-textured (high clay content) soils are plastic and sticky when wet and are difficult to excavate, grade, and compact.

Water movement through the soil should be moderate to slow to retard the movement of leachate from the landfill into underlying layers where it may pollute ground water.

Cover material must be easy to dig, move, and spread over the refuse during both wet and dry periods. It must be easy to compact to reduce the rate of water intake. The area from which the cover material is taken should be suitable for revegetating in order to prevent erosion in the borrow area. Soil used for the final cover layer should be well suited to the growth of plants.

Disposing of Other Kinds of Waste

Research is being conducted on the disposal of many kinds of wastes into soils. Such wastes include animal wastes from feedlots; residues from vegetable, meat, poultry, and dairy

processing plants; chemicals used for fertilizers, pesticides, and herbicides; and effluent and sludge from municipal sewage plants.

Basic factors to consider in disposing of these wastes into the soil are the ability of the soil to assimilate wastes safely, the quality of the waste, particularly its content of nutrients and heavy metals, and the ability of vegetation grown in the disposal areas to utilize the nutrients in the waste. Soil properties that affect use for landfills also affect use of soils for disposing of other kinds of wastes.

How Soil Surveys Can Help

Soil surveys of counties throughout the United States are made cooperatively by the Soil Conservation Service and state and other federal agencies. Each soil survey contains detailed soil maps and describes soil properties that affect waste disposal. By studying the soil survey of the area that interests you, you can determine the general suitability of areas for a septic tank absorption field, sewage lagoon, or sanitary landfill. Before installing a waste disposal system, the specific site selected should be examined in detail and local regulations should be observed.

How to Obtain a Soil Survey

You can call the local office of the Soil Conservation Service to determine whether a soil survey of your area is available. If the soil survey has not yet been published, you can arrange to look at maps that have been completed. If you are in a conservation district, a conservationist or soil scientist assigned by the Soil Conservation Service to the district can discuss soils and waste disposal with you.

Issued September 1974

For sale by the Superintendent of Documents
U.S. Government Printing Office, Washington, D.C. 20402
Price 25 cents Stock Number 0100-02914